

ThinkPad

**ThinkPad SL300
Hardware Maintenance Manual**

ThinkPad

**ThinkPad SL300
Hardware Maintenance Manual**

Note

Before using this information and the product it supports, be sure to read the general information under "Notices" on page 143.

Forth Edition (March 2009)

© Copyright Lenovo 2008, 2009. All rights reserved.

LENOVO products, data, computer software, and services have been developed exclusively at private expense and are sold to governmental entities as commercial items as defined by 48 C.F.R. 2.101 with limited and restricted rights to use, reproduction and disclosure.

LIMITED AND RESTRICTED RIGHTS NOTICE: If products, data, computer software, or services are delivered pursuant a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

© 2008, 2009 Lenovo

Contents

About this manual	v	No-beep symptoms	45
Safety information	1	LCD-related symptoms	46
General safety	2	Intermittent problems	47
Electrical safety	3	Undetermined problems	47
Safety inspection guide	5	ThinkPad SL300	49
Handling devices that are sensitive to electrostatic discharge	6	Specifications	49
Grounding requirements	6	Status indicators	52
Safety notices: multilingual translations	7	FRU tests	54
Laser compliance statement	14	Fn key combinations	56
Important service information	17	FRU replacement notices	58
Strategy for replacing FRUs	17	Screw notices	58
Strategy for replacing a hard disk drive	18	Retaining serial numbers	59
Important notice for replacing a system board	18	Removing and replacing a FRU	62
How to use error message	18	1010 Battery pack	63
Strategy for replacing FRUs for CTO, CMV, and GAV	19	1020 Optical drive	64
Product definition	19	1030 Hard disk drive (HDD) cover and HDD	65
FRU identification for CTO, CMV, and GAV products	19	1040 DIMM slot cover	67
Important information about replacing RoHS compliant FRUs	21	1050 DIMM	68
General checkout	23	1060 PCI Express Mini Card for wireless WAN	69
What to do first	24	1070 Intel Turbo Memory Minicard	71
Checkout guide	25	1080 Thermal door	72
Diagnostics using PC-Doctor for DOS	26	1090 Fan assembly	73
PC-Doctor for Windows	28	1100 CPU thermal module	75
PC-Doctor for Rescue and Recovery	28	1110 CPU	77
Power system checkout	29	1120 Palm rest	78
Checking the AC adapter	29	1130 <i>Bluetooth</i> daughter card (BDC)	81
Checking operational charging	30	1140 PCI Express Mini Card for wireless LAN/WiMAX	82
Checking the battery pack	30	1150 Keyboard	84
Checking the backup battery	31	1160 Backup battery	86
Related service information	33	1170 Top case sub assembly	87
Restoring the factory contents by using Product Recovery discs	33	1180 Magnesium frame assembly	89
Passwords	34	1190 I/O board	90
Power-on password	34	1200 LCD unit	92
Hard-disk password	34	1210 System board	96
Supervisor password	34	1220 Small board	101
How to remove the power-on password	35	1230 Base cover	102
How to remove the hard-disk password	35	2010 LCD front bezel	103
Power management	37	2020 Integrated camera	104
Screen blank mode	37	2030 LCD panel	105
Standby mode	37	2040 Antenna assembly, LCD cable, camera cable, and hinges	107
Hibernation mode	38	Locations	112
Symptom-to-FRU index	39	Front view	112
Numeric error codes	39	Rear view	114
Error messages	44	Bottom view	114
Beep symptoms	45	Parts list	115
		Overall	116
		LCD FRUs	129
		Keyboard	132
		Miscellaneous parts	133
		AC adapters	134
		Power cords	135
		Recovery discs	136